

Avigilon NVR5 Premium

User Guide

NVR5-PRM-96TB-S19, NVR5-PRM-128TB-S19, NVR5-PRM-160TB-S19, NVR5-PRM-192TB-S19, NVR5-PRM-224TB-S19



© 2023, Avigilon Corporation. All rights reserved. AVIGILON, the AVIGILON logo, AVIGILON CONTROL CENTER, and ACC are trademarks of Avigilon Corporation. Microsoft and Windows are trademarks of the Microsoft group of companies. Dell is a trademark of Dell Inc. Other names or logos mentioned herein may be the trademarks of their respective owners. The absence of the symbols $^{\text{\tiny M}}$ and $^{\text{\tiny O}}$ in proximity to each trademark in this document or at all is not a disclaimer of ownership of the related trademark.

This document has been compiled and published using product descriptions and specifications available at the time of publication. The contents of this document and the specifications of the products discussed herein are subject to change without notice. Avigilon Corporation reserves the right to make any such changes without notice. Neither Avigilon Corporation nor any of its affiliated companies: (1) guarantees the completeness or accuracy of the information contained in this document; or (2) is responsible for your use of, or reliance on, the information. Avigilon Corporation shall not be responsible for any losses or damages (including consequential damages) caused by reliance on the information presented herein.

Avigilon Corporation avigilon.com

20230727

Contents

Introduction	5
Before You Start	5
Overview	5
Front View (96TB - 224TB)	5
Back View (192TB, 224TB)	7
Back View (96TB, 128TB, 160TB)	8
Package Contents	9
Installation	10
Connect Cables	10
Install the Sliding Rack Rails and Cable Management Arm	10
Install the Bezel	10
Log into Windows Server for the First Time	12
Activate the ACC Software and Connect to Avigilon Cloud Services	13
Activate ACC Software and Feature Licenses	13
Connect to Avigilon Cloud Services (Optional)	13
Reactivating a License	13
Troubleshooting	14
Network Configuration	14
Monitoring System Health	14
Operating System Recovery By Avigilon Recovery Partition	15
Operating System Recovery By External USB	16
Maintenance	17
Checking System Health	17
ACC Client Site Health	17
Server Administrator Software System Health	17
Replacing Hard Drives	18
Guidelines	18
Replacing a Hard Drive Blank	19
Replacing Front or Back Hard Drives	21
Replacing Center Hard Drives	21
LED Indicators	24
Diagnostic Indicators	24
iDRAC Direct LED Indicators	25
Power Status Indicators	25
Network Link Status Indicators	27
Hard Drive RAID Status Indicators	27

System Health and Identification Modes	28
Resetting the iDRAC System	28
For More Information	30
Product User Guides	30

Introduction

The Avigilon Network Video Recorder (NVR5 Premium) is preloaded with Avigilon Control Center (ACC) software and is configured for exceptional performance and reliability. The Network Video Recorder offered in higher data storage capacities can be easily integrated into any existing Avigilon surveillance system or act as the base of a new site.

Before You Start

Avigilon recommends the use of an uninterruptible power supply (UPS) system to protect your video surveillance system hardware. A UPS system is used to protect critical equipment from mains supply problems, including spikes, voltage dips, fluctuations and complete power failures using a dedicated battery. It can also be used to power equipment during the time it takes for a standby generator to be started and synchronized.

Any UPS connection must include configuration to shut down the operating system on the appliance when battery power is low or there is 15 minutes of power remaining.

It is recommended that cameras not be connected to the appliance until after the appropriate network configuration has been set up.

Overview

Front View (96TB - 224TB)

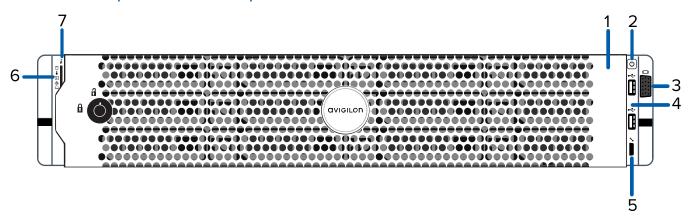


Figure 1: Front view of NVR5 Premium 96TB - 224TB recorder with front bezel installed

Introduction 5

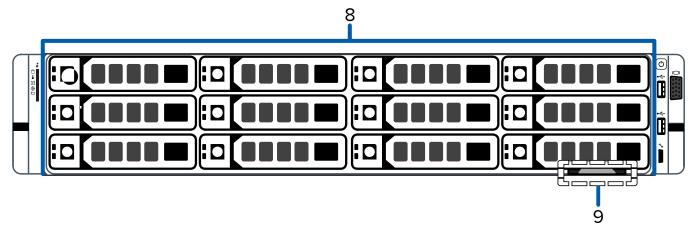


Figure 2: Front view of NVR5 Premium 96TB - 224TB recorder with front bezel removed

1. Bezel

Protects against unauthorized physical access to the hard drives.

For more information, see *Install the Bezel* on page 10.

2. Power button

Controls the power supply to the recorder.

3. Video connector

Accepts a VGA monitor connection.

4. USB 2.0 port

Accepts USB connectors to external devices.

96TB, 128TB and 160TB recorders include one port.

192TB and 224TB recorders include two ports.

5. iDRAC Direct micro USB port and iDRAC Direct LED indicator

Connects a laptop or desktop computer on the same network as the Integrated Dell™ Remote Access Controller (iDRAC) version 9.

For more information about the iDRAC web interface, see the information tag on your recorder and the Enabling iDRAC Enterprise Features Setup Guide.

6. Diagnostic indicators

Provides information about system operations.

For more information about the above LED indicators, see *LED Indicators* on page 24.

7. System health and i system identification button

Displays the system health. Also identifies a recorder deployed in a rack with other equipment.

For more information, see *System Health and Identification Modes* on page 28.

8. Twelve (12) Hard drives

Provides access to hot-swappable hard drives. There are LED indicators on each hard drive.

Front View (96TB - 224TB)

Some drives may contain an empty hard drive tray.

9. Information tag (top and bottom views are not shown)

Slides out to provide the serial number, system information, and iDRAC account credentials for initial login to the iDRAC web interface.

Back View (192TB, 224TB)

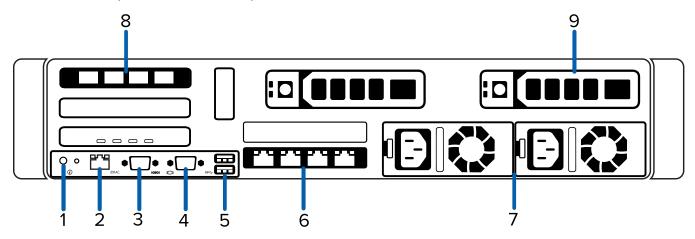


Figure 3: Back view of NVR5 Premium 192TB and 224TB recorder

1. System identification button

Identifies a recorder deployed in a rack with other equipment. Also resets the iDRAC web interface without rebooting the operating system.

For more information about the iDRAC reset, see the **Enabling iDRAC Enterprise Features Setup Guide**.

For more information about iDRAC reset, see the **Enabling iDRAC Enterprise Features Setup Guide**.

2. Out-of-Band Management (OOBM) port

Accepts an OOBM RJ-45 connection and includes an LED indicator of the connection.

3. Serial connector

Accepts connections to serial devices.

4. Video connector

Accepts a VGA monitor connection.

5. Keyboard port and mouse port

Accepts connectors to a keyboard and mouse.

6. Four (4) 1 Gbps Ethernet ports

Accepts Ethernet connections to multiple networks and includes LED indicators of the connections.

7. Two (2) Power supply connectors

Accepts a power supply connection.

8. Four (4) 10Gbps SFP+ Ethernet ports

Accepts Ethernet connections to multiple networks and includes LED indicators of the connections.

Back View (192TB, 224TB) 7

9. Hard drives

Provides access to hot-swappable hard drives. There are LED indicators on each hard drive.

Some drives may contain an empty hard drive tray.

For more information about the above LED indicators, see *LED Indicators* on page 24.

Back View (96TB, 128TB, 160TB)

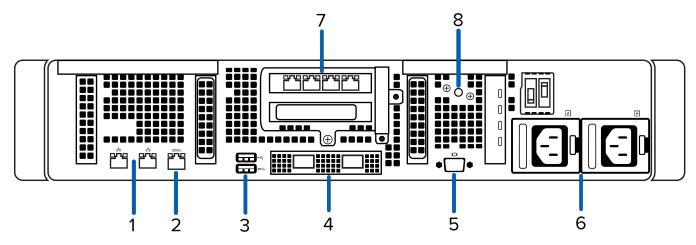


Figure 4: Back view of NVR5 Premium 96TB, 128TB and 160TB recorder

1. Two (2) 1 Gbps Ethernet ports

Accepts Ethernet connections to multiple networks and includes LED indicators of the connections.

2. Out-of-Band Management (OOBM) port

Accepts an OOBM RJ-45 connection and includes an LED indicator of the connection.

3. Keyboard port and mouse port

Accepts connectors to a keyboard and mouse.

4. Two (2) 10Gbps SFP+ Ethernet ports

Accepts Ethernet connections to multiple networks and includes LED indicators of the connections.

5. Video connector

Accepts connections to serial devices.

6. Two (2) Power supply connectors

Accepts a power supply connection.

7. Four (4) 1 Gbps Ethernet ports

Accepts Ethernet connections to multiple networks and includes LED indicators of the connections.

8. System identification button

Identifies a recorder deployed in a rack with other equipment. Also resets the iDRAC web interface without rebooting the operating system.

For more information about the iDRAC reset, see the **Enabling iDRAC Enterprise Features Setup Guide**.

For more information about the above LED indicators, see LED Indicators on page 24.

Package Contents

Ensure the package contains the following:

- Avigilon NVR5 Premium Recorder
- Rack sliding rail assembly kit
- Cable management arm assembly kit
- Bezel and key
- Power cables
 - $^{\circ}$ 2 x C13 / C14
 - $^{\circ}$ 2 x region specific

NA: NEMA 5-15P / C13

UK: BS 1363 / C13

EU: SCHUKO / C13

AU: AS3112 / C13

Package Contents 9

Installation

Connect Cables

Refer to the diagrams in the Overview section for the location of the different connectors. Make the following connections as required:

- 1. Connect a KVM switch or separate keyboard, mouse and monitor to the recorder.
 - The keyboard and mouse can be connected to any USB port on the recorder.
 - · The monitor can be connected to any video connector at the front or back of the recorder.
- 2. Connect the recorder to your network by plugging an Ethernet cable into one of the Ethernet ports.
- 3. For out-of-band management access and functionality, connect Ethernet cable to the OOBM connector.
- 4. Connect a power cable to each power supply at the back of the recorder.
- 5. Press the power button on the front of the recorder. Check that the recorder LED indicators display the correct status. For more information on the different LED status indicators, see <u>LED Indicators</u> on page 24.

Install the Sliding Rack Rails and Cable Management Arm

If the recorder will be mounted in a server rack, install the Sliding Rack Rails and the Cable Management Arm (CMA) provided in the recorder package. Follow the procedures outlined in the *Rack Installation Instructions* and the *CMA Installation Instructions* provided in the assembly kits.




NOTE

When rack-mounting the recorder, ensure no interference occurs from the sliding arms of adjacent equipment in the rack. Every sliding rack rail on the server rack must be aligned before you insert the recorder into the rail for a smooth installation. For more information, refer to the dimensions in your server rack design documentation.

Install the Bezel

The bezel can be installed on the front of the recorder to help protect the hard drives against unauthorized access.

Installation 10

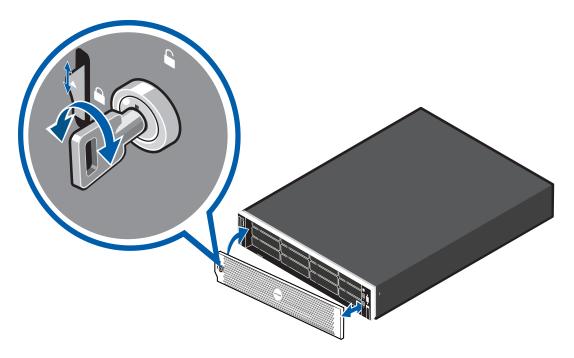

- 1. Align and insert the right end of the bezel until it clicks into place.
- 2. Push the left end of the bezel into the front of the unit until it clicks into place.

Install the Bezel

Log into Windows Server for the First Time

Windows Server 2019

After the recorder powers up, you will need to configure the Windows operating system for the first time.

1. On the first screen, scroll through the list and select your preferred language.



Figure 5: The language selection screen during initial Windows software set up. (Used with permission from Microsoft.)

2. Select the country/region, preferred app language and keyboard layout, and then click Next.



NOTE

If a language other than English is selected, the server will restart. This is normal Windows behavior. Proceed with step 3 once the server has finished restarting.

- 3. Select the Desktop Experience version of the operating system and click Next.
- 4. The End User License agreements are displayed. Review the terms and click **Accept**.
- 5. On the Customize settings screen, set a password for the local administrator account. The password should:
 - Have a minimum length of 7 characters.
 - Meet complexity requirements. See https://technet.microsoft.com/en-ca/library/cc956977.aspx for details.

You cannot reuse your last 24 passwords.

The password will expire in 42 days.

- 6. Press Ctrl+Alt+Delete to unlock and type in the credentials created in the previous step.
- 7. Once logged in, the recorder will go through initial system setup.
- 8. The Setup dialog will start configuring the system storage. This process may take up to 5-10 minutes depending on the size of the storage volume.
- 9. Once the setup procedure is complete, the system will restart.

Proceed to activate the license for the Avigilon Control Center software on your Network Video Recorder.

Activate the ACC Software and Connect to Avigilon Cloud Services

After you have deployed your NVR5 WorkstationRemote Monitoring WorkstationNVR5 Premium recorder, activate your ACC software and feature licenses and connect to Avigilon Cloud Services.

Activate ACC Software and Feature Licenses

You can activate, deactivate, and reactivate product or feature licenses. Licenses are called Product Keys in the ACC system, and Activation IDs in the licensing portal.



IMPORTANT

When a new server is added to or removed from a multi-server site, the existing site licenses become inactive and must be reactivated to confirm system changes. See *Reactivating a License* below.

- Initial ACC[™] System Setup and Workflow Guide
- ACC 7 Help Center

Printable versions of these guides are available on the Avigilon website: avigilon.com/support/software/.

Once your license is activated, you can immediately use the new licensed features.

Connect to Avigilon Cloud Services (Optional)

After activating your ACC software, you can connect your ACC site to the cloud, which may require a subscription, and take advantage of the capabilities and features that provide centralized access across distributed systems.

To connect your site to Avigilon Cloud Services, see help.avigilon.com/cloud.

For information about the cloud services, see avigilon.com/support/cloud/avigilon-cloud-services.

You can start to back up the system settings for your new site in the ACC Client software after it is configured. These settings include the ACC password, and the settings for the camera connections. For more information on backing up the site and server configurations, see the *Avigilon ACC Client User Guide*.

Reactivating a License

FOR ENTERPRISE EDITION

When servers are added to or removed from a site, the site licenses become inactive and must be reactivated to confirm system changes.

If you do not reactivate the affected licenses, the site will stop normal operations.

- 1. In the New Task menu ____, click **Site Setup**.
- 2. Click the site name, then click
- Click Reactivate Licenses....

If you have Internet access:

- a. Click Reactivate Licenses.
- b. Click **OK** to confirm your changes.

If you do not have Internet access:

- a. Select the Manual tab.
- b. Click Save File... and choose where you want to save the . key files.
- c. Copy the . key files to a computer with internet access:
 - i. Go to activate.avigilon.com.
 - ii. Click Choose File and select the . key file.
 - iii. Click Upload. A capabilityResponse.bin file should download automatically.
 If not, allow the download to occur when you are prompted.
 - iv. Complete the product registration page to receive product updates from Avigilon.
 - v. Copy the .bin file to a computer running the ACC Client software.
- d. In the License Management dialog box, click Apply....
- e. Select the .bin file and click Open.
- f. Click **OK** to confirm your changes.

Troubleshooting

Network Configuration

By default, the Remote Monitoring Workstation acquires an IP address on the network through DHCP. If you need to set up the workstation to use a static IP address or any specific network configuration, see the *Windows Help and Support* files for more information.

By default, the NVR5 Workstation acquires an IP address on the network through DHCP. If you need to set up the workstation to use a static IP address or any specific network configuration, see the *Windows Help and Support* files for more information.

By default, the NVR5 Premium acquires an IP address on the network through DHCP. If you need to set up the workstation to use a static IP address or any specific network configuration, see the *Windows Help and Support* files for more information.

Monitoring System Health

You can monitor the health of the system components in the Site Health page in either the ACC Client software or Avigilon Cloud Services (ACS). See the Help files provided with the ACC Client software, the Avigilon ACC Client User Guide, or the Avigilon ACS Client User Guide available from the Avigilon website for more information.

Troubleshooting 14

Operating System Recovery By Avigilon Recovery Partition

If you need to recover the Windows operating system, the NVR5 Premium includes an onboard Avigilon recovery partition that is separate from the operating system partition. The advantage of using the Avigilon recovery partition is that you do not need an internet connection to download the recovery image and you do not need to create a bootable USB recovery device.



IMPORTANT


Your operating system drive will be erased and restored to factory settings. Before you proceed with operating system recovery, complete any necessary backups of custom ACC configuration and video recordings. For more information about ACC software backups, see avigillon.com/recovery.



NOTE

After operating system recovery, you need to reinstall the previously installed ACC software. Depending on when your NVR5 Premium was shipped, it is recommended that you connect to the network when possible to install updates for Windows and ACC Client software after system recovery is completed.

- 1. Start operating system recovery in one of the following ways:
 - On your Windows desktop, select ## and then hold down the Shift key and select Restart.
 - On your locked Windows screen, select 0 and then hold down the **Shift** key and select **Restart**.
 - During direct boot of the operating system, repeatedly press the down-arrow key and select the partition.
- 2. On the **Choose an option** screen, select **Use another operating system**.
- 3. Select the **OS Recovery** partition.
- 4. On the Avigilon Recovery window, select Recover.

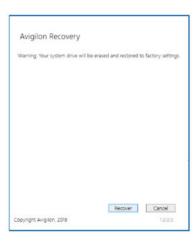

Allow up to half an hour for the recovery to complete.

5. After system reboot, complete the Windows setup process.

For more information about setting up a Windows Server 2019 operating system, see <u>Log into Windows</u> Server for the First Time on page 12.



NOTE

During the Windows setup steps, you will not be asked to choose a version and install the ACC software. The ACC software installation is covered in the following step.

6. Navigate to C:\Avigilon\Control Center Installation Files, and run the ACC installer for the version of ACC software in use at your site.

If needed, connect to the internet and download the required ACC installers.

Operating System Recovery By External USB

If you need to recover the Windows operating system on the Network Video Recorder and you have access to the internet, download the latest Avigilon Recovery Image from avigilon.com/recovery and refer to Support and Downloads for the following information:

- · Minimum size of the USB recovery device
- · Creating an external USB recovery device
- · Recovering the operating system from an external USB recovery device

The general steps are:

1. Load the Avigilon Recovery Image onto a USB recovery device.

For the instructions on creating a USB recovery device, see the <u>Windows Upgrade and Recovery Guide for Avigilon</u>.

- 2. Plug the USB recovery device into the recorder.
- 3. Press the **F11** key while booting the recorder.
- 4. On the UEFI Boot menu, select the USB recovery device.

Maintenance

Checking System Health

You can check your system health through the ACC Client Site Health or with the Server Administrator software.

ACC Client Site Health

You can check on the health of the system components in the Site Health in the ACC Client software. See <u>Site Health</u> in the ACC Client User Guide for more information.

Server Administrator Software System Health

The Server Administrator software is pre-installed on the recorder. The software provides information about the recorder's system operation status, and gives you remote access to the recorder for recovery operations.

If one of the LED indicators on the recorder is flashing an error warning, the Server Administrator will display details about the problem. For more information about the LED indicators, see *LED Indicators* on page 24.

- 1. Open the Server Administrator.
 - To open the Server Administrator locally, double-click the Server Administrator shortcut icon on the desktop.
 - To open the Server Administrator remotely, open a web browser and enter this address: https://<recorder IP Address>:1311/.

```
For example: https://192.168.1.32:1311/ or https://localhost:1311/.
```

If you are using an intranet connection, your browser may display an error message. Allow the browser to ignore the certificate warnings.

- 2. If asked to log in, enter the Windows software administrator username and password that was configured for the recorder.
- 3. On the Server Administrator home page, the health of the system components are displayed in the workspace on the right.
 - To see the health of other system components, expand and select a different component from the System Tree on the left.
 - The table displayed in the workspace lists system components and their status:
 - The system component is running normally.
 - The system component has a non-critical warning.
 - The system component has a critical failure.
 - The system component status is unknown.
 - To see the details of a system component, select the system component from the workspace.

The Server Administrator is also used to customize the Redundant Array of Independent Disks (RAID) settings, assign a hot spare and remotely monitor the system health. For more information about the features in the Server Administrator, see the Help system provided in the software.

Maintenance 1.

Replacing Hard Drives



NOTE

Before powering down the recorder for any upgrade, recovery or maintenance, back up critical recorder data and programs. For more information, see the $Windows^{\text{TM}}$ Upgrade and Recovery Guide for Avigilon Systems (link).

The operating system and the Avigilon Control Center software are mirrored on two hard drives at the back of the recorder. If one of the hard drives fail, you can replace the failed drive while the recorder continues to run from the other.

If your recorder is still under warranty, contact Avigilon Technical Support to replace the failed hard drive.

If more than two hard drives fail at the same time, contact Avigilon Technical Support immediately for recovery instructions.

Only replace a hard drive if the hard drive LED indicator and the Server Administrator displays an error.

- 1. Open the Server Administrator.
- 2. Check which hard drive has failed, then disconnect the drive through the Server Administrator software.
 - Hard drives are installed at the front and back of the recorder. Be sure you can identify which hard drive needs to be replaced. Hard drives are installed also in the center of the 192TB or 224TB recorder.
- 3. If you are replacing a hard drive at the center of the 192TB or 224TB recorder, shut down the recorder then disconnect all cables.



NOTE


Skip this step if you plan to hot-swap a hard drive at the front or back of the recorder.

- 4. Remove the bezel.
- 5. Depending on where the hard drive is located, perform one of the following procedures:

Guidelines

When replacing hard drives, observe the following general guidelines:

• If only one drive is used, install the drive in the drive bay with the lowest device number. For example:

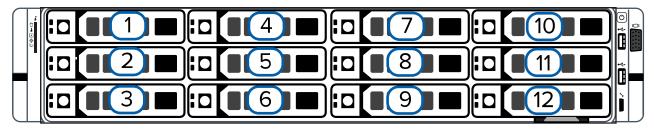

Replacing Hard Drives 18



WARNING

Opening or removing the system cover while the system is powered on may expose you to a risk of electric shock.



CAUTION

Do not operate the system without the cover for a duration exceeding five minutes. Operating the system without the system cover can result in component damage.



CAUTION

To ensure proper operation and cooling, all bays in the system and system fans must be always populated with a component or a blank.


Replacing a Hard Drive Blank

The hard drives on the Network Video Recorder are set up in a RAID configuration. This allows information to be recorded across several hard drives.

If one hard drive fails, there is enough information on the other hard drives for the recorder to continue recording video.

Depending on the recorder model, there may be hard drive blanks at the front of the recorder. You can replace the blanks with hard drives as required.

1. Remove the bezel.

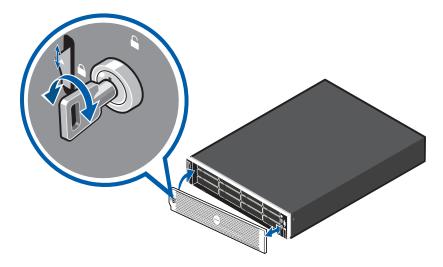

- a. Unlock the bezel.
- b. Push the release button next to the lock.
- c. Pull the left end of the bezel then unhook the right end to remove the bezel.

2. Press the release button and slide the blank out of the hard drive slot.



- 3. Insert the hard drive all the way into the recorder then push the handle against the hard drive to lock it into place.
- 4. Open the Server Administrator application and expand the System Tree.

The new hard drive should be automatically added to the Physical Disks list. The list is typically available here: System > Storage > PERC H740P Mini (Embedded) > Connector 0 (RAID) > Enclosure (Backplane) > Physical Disks.

5. Assign a task to the new hard drive or allow it to exist as an extra storage drive.

It is recommended to use the new hard drive as a hot spare. Hot spares are hard drives that are available on standby in the event of a hard drive failure in the RAID. If that occurs, you can configure the system to automatically redirect recording to the unused hard drive.

To assign the new hard drive as a hot spare:


- a. In the Task list, select Assign and Unassign Global Hot Spare.
- b. Click Execute.

If the new hard drive is not displayed in the Server Administrator, try one of the following:

- Refresh the browser.
- · Reboot the recorder.

Replacing Front or Back Hard Drives

1. Locate the failed hard drive at the front or back of the recorder, depending on the model.

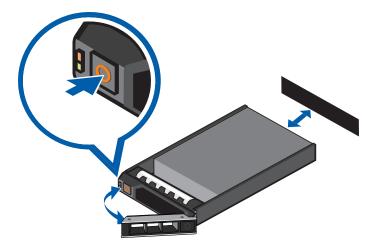

- 2. Press the release button on the front left of the hard drive.
- 3. When the handle is released, pull the hard drive out of the recorder.
- 4. Remove the four screws from the side of the hard drive carrier.
- 5. Lift the failed hard drive out of the carrier.
- 6. Insert the replacement hard drive into the carrier and screw it into place. The hard drive connectors should face the back.
- 7. When the hard drive is secured in the carrier, insert the hard drive back into the recorder.
- 8. Once the hard drive is inserted all the way in, push the handle against the hard drive to lock it into place.


The recorder immediately starts rebuilding the hard drive. The progress of the rebuilding is displayed in the Physical Disks panel or Server Administrator. This may take several hours.

Replacing Center Hard Drives


To replace a hard drive stored in the center of the 192TB or 224TB recorder, complete the following steps:

1. At the top of the recorder, unlock the latch release then lift and rotate the latch towards the back of the recorder.

The cover slides back and is released from the recorder body.

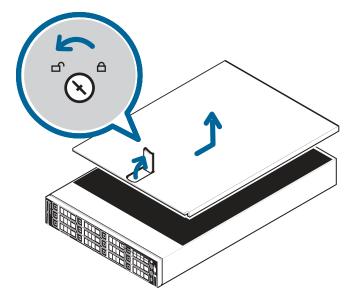

- 2. Hold the cover from both sides and lift it off the recorder.
- 3. Locate the failed hard drive on the center hard drive tray.
- 4. Lift the handles on either side of the hard drive tray.

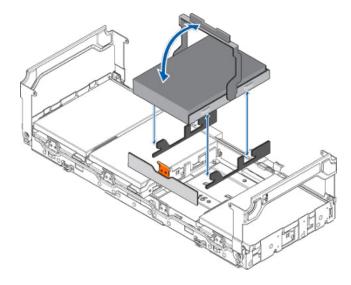

- 5. Press the orange release tab on the hard drive tray then lift up the hard drive carrier handle to release the hard drive.
- 6. Hold the handle and lift the hard drive out of the tray.
- 7. While holding the handle, pull the edges of the carrier away from the hard drive to remove the failed hard drive from the carrier.
- 8. Align the slots on the new hard drive to the tabs on the hard drive carrier.
- 9. Pull the edges of the carrier over the slots on the hard drive.
- 10. Place the new hard drive into the tray and push the handle down until the hard drive clicks into place.

11. Fold down the handles on the hard drive tray. Close and lock the recorder cover.

After the operating system starts up, the recorder immediately starts rebuilding the hard drive. The progress is displayed in the Server Administrator. This may take several hours.

LED Indicators

The following tables describe what the LEDs on the Network Video Recorder indicate.

Diagnostic Indicators

The diagnostic indicators on the front panel highlight system issues during system startup.



NOTE

The diagnostic indicators only light-up when the recorder is powered.

LED Indicator	Description		
<u>i</u>	Steady blue — The system is powered on and healthy. System health mode is active.		
П	 Blinking blue — System identification mode is active. 		
	Steady amber — The system is in fail-safe mode.		
System health and System ID	NOTE If the system health indicates a degraded or critical state, contact Avigilon Technical Support for assistance.		
	Blinking amber — The system is experiencing a fault. Check the System Event Log.		
	For more information, see System Health and Identification Modes on page 28.		
9	Steady amber — The hard drive is experiencing an error. Check the System Event Log.		
Hard drive			
1	Steady amber — A thermal error has occurred.		
Tommorotura	Possible errors include:		
Temperature			
	° Fan failure		
	Check that the fans are functioning correctly and the air vents are not blocked.		
4	Steady amber — An electrical error has occurred.		
======================================	Possible errors include:		
	 Voltage out of range 		
	° Failed power supply		
	 Voltage regulator 		
	Check the power status indicator to confirm if it is an issue with the power supply, and reseat the power supply unit, if the error persists.		

LED Indicators 24

LED Indicator	r Description	
&	Steady amber — A memory error has occurred.	
Memory	Check the System Event Log and reset the memory module, if the error persists.	
	Steady amber — A PCle card error has occurred.	
PCIe	Restart the system, upgrade the device firmware and reinstall the card, if the error persists.	

iDRAC Direct LED Indicators

The iDRAC Direct LED indicates if the iDRAC port is connected to a laptop or desktop computer.



Figure 6: The iDRAC Direct LED indicator for (1) 96TB, 128TB and 160TB recorders (2) 192TB and 224TB recorders

LED Indicator	Description
Off	The device is unplugged from the port.
Green for 2 seconds	The device is connected to the port.
Flashing green — on for 2 seconds and off for 2 seconds	The device is recognized by the port.

Power Status Indicators

The power button on the front lights up when power is on.

Additional information about the power supply is provided by the power status indicator on the power supplies at the back. The following table describes what the LEDs indicate:

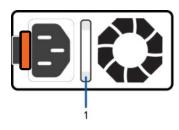


Figure 7: (1) The power status indicator for 192TB and 224TB recorders

iDRAC Direct LED Indicators 25

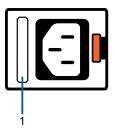


Figure 8: (1) The power status indicator for 96TB, 128TB and 160TB recorders

LED Indicator	Description	
Off	Power is not connected.	
Green	Power is supplied.	
Blinking amber	There is a problem with the power supply.	
Blinking green	A firmware update is being applied to the power supply unit.	
	CAUTION To prevent malfunction of the power supply unit, do not disconnect the power cord or unplug the power supply unit when updating firmware.	
Blinking green and turns off	The redundant power supply is mismatched. This only occurs if you have a secondary redundant power supply installed.	
	CAUTION To prevent power supply mismatches, do any of the following:	
	 Avoid mixing power supply units from previous generations of servers even if the units have the same power rating. 	
	 Replace only the power supply unit with the blinking indicator. 	
	 Identical power supply units must receive the same input voltages, be of the same type and support the same maximum power output. 	
	Combining AC and DC power supply	

Power Status Indicators 26

units is not supported.

Network Link Status Indicators

When the recorder is connected to the network, the recorder's connection status LEDs above the Ethernet port display the recorder's connection status to the network. The following table describes what the LEDs indicate:

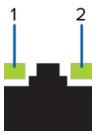


Figure 9: (1) Link LED. (2) Connection activity LED.

LED Indicator	Description
Off	The recorder is not connected to a network.
Link LED — green Connection Activity LED — blinking green	The recorder is connected to a network at the maximum port speed.
Link LED — amber Connection Activity LED — blinking green	The recorder is connected to a network at less than the maximum port speed.
Link LED — green Connection Activity LED — off	The recorder is connected to a network at the maximum port speed and data is not being sent or received.
Link LED — amber Connection Activity LED — off	The recorder is connected to a network at less than the maximum port speed and data is not being sent or received.

Hard Drive RAID Status Indicators

Each hard drive has its own set of LED indicators to show its activity and status.

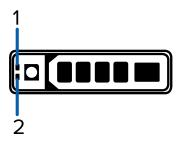


Figure 10: (1) Status LED. (2) Activity LED for 192TB and 224TB recorders

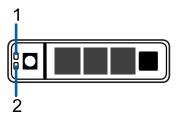


Figure 11: (1) Status LED. (2) Activity LED for 96TB, 128TB and 160TB recorders

Network Link Status Indicators 27

The Activity LED flashes green when the hard drives are working. The following table describes what the Activity LEDs indicate:

Status LLDs maleate.		
LED Indicator	Description	
Green	The hard drive is online.	
Off	The hard drive is ready for removal from the recorder.	
	NOTE The indicator remains off until all drives are initialized after the system is turned on. Drives are not ready for removal during this time.	
Two short green flashes every second	The system is identifying a new hard drive, or preparing a hard drive for removal.	
Flashes green, amber, then off	The hard drive is predicted to fail.	
Four short orange flashes per second	The hard drive has failed.	
Flashes green slowly	The hard drive is rebuilding.	
Blinks green for three seconds, orange for three seconds, and off for six seconds	The hard drive rebuild has been aborted.	

System Health and Identification Modes

In the front left panel of the recorder, you can switch between system health and system identification modes:

• Press the button to enable the system identification mode, which is used to identify a recorder deployed in a rack with other equipment.

The blue indicator starts blinking.

• Press the **i** button again to switch back to system health mode.

The blue indicator stops blinking.

For more information about the LED indicators, see <u>LED Indicators on page 24</u>.

Resetting the iDRAC System

To reboot the iDRAC web interface without rebooting the operating system:

- 1. Go to the front left panel of the recorder.
- 2. Press and hold the system health and system identification button for 16 seconds until the cooling fans start spinning at full speed.

The iDRAC system restarts without changing any saved settings. It may take a minute or longer until the remote controller restarts.

For information about using the iDRAC web interface to perform the reset, see the <u>Enabling iDRAC Enterprise</u> Features Setup Guide.

Limited Warranty

Avigilon warranty terms for this product are provided at avigilon.com/warranty.

For More Information

For additional product documentation and software and firmware upgrades, visit support.avigilon.com.

Technical Support

Contact Avigilon Technical Support at support.avigilon.com/s/contactsupport.

Product User Guides

- Windows Upgrade and Recovery Guide for Avigilon
- Enabling iDRAC Enterprise Features Setup Guide

For More Information 30